

## **ASSEMBLY INSTRUCTIONS** **SOLO 3' BED**

**IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING OR USING YOUR SOLO 3' BED FRAME.**

**PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

### **HEALTH & SAFETY :**

DO NOT jump on this bed frame.

DO NOT use this bed frame if any parts are missing, damaged or worn.

DO NOT use this bed frame unless all fixings are secured.

Please keep small parts out of reach of children.

Always use on a level, even surface.

**WARNING:** If this bed is placed on a non-carpeted floor you must place some protection under all legs to stop the bed frame from moving. If this is not adhered to there is no guarantee if the bed frame collapses.

### **CARE & MAINTENANCE:**

Assemble in the room of use.


Periodically check all screws & fixings to ensure they are secure.

DO NOT push the bed frame as this will damage the legs.

Always lift the bed with two people in reposition.

Keep any sharp objects away from the frame.




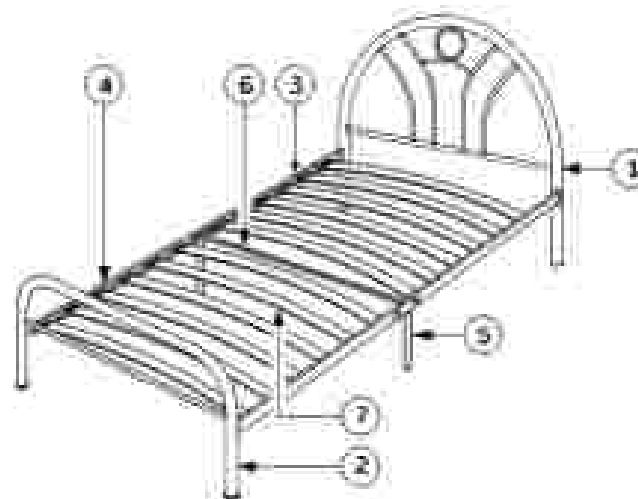


| Part List |                              |     |     | Hardware List (found in box 1) |                               |     |
|-----------|------------------------------|-----|-----|--------------------------------|-------------------------------|-----|
| Part      | Description                  | Box | Qty | Part                           | Description                   | Qty |
| 1         | Headend                      | 1   | 1   | A                              | Roll-30mm Black Round Stopper | 4   |
| 2         | Footend                      | 1   | 1   | B                              | M6 x 15mm JCB Screw           | 8   |
| 3         | Side Support (left sticker)  | 2   | 2   | C                              | M6 x 40mm JCB Screw           | 4   |
| 4         | Side Support (right sticker) | 2   | 2   | D                              | M6 Nut                        | 4   |
| 5         | Base Leg                     | 1   | 2   | E                              | Single Slat Cap               | 24  |
| 6         | Flat Support                 | 1   | 1   |                                |                               |     |
| 7         | Slat                         | 1   | 12  |                                |                               |     |

**\*\*M6 Allen Key provided**


**Step 1:** Fit the Side Supports (3) and (4) to the headend (1) and footend (2) using hardware part (B) but do not fully tighten yet. **DO NOT** use any power tools as this may damage the frame and will invalidate any claim.

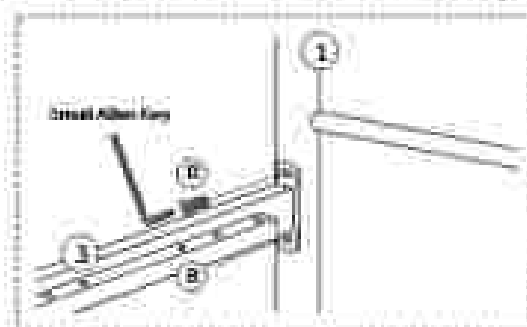


**Step 2:** Place the base leg (5) in the middle of the side supports (3) and (4). **DO NOT** use any power tools as this may damage the frame and will invalidate any claim.

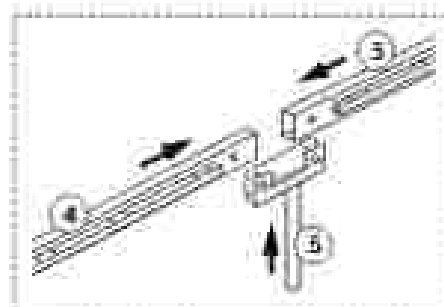



**Step 3:** Place the mid support (6) at the center and screw together with the base leg (3) using hardware parts (C) and (D).  
**DO NOT** use any power tools as this may damage the frame and will invalidate any claim.

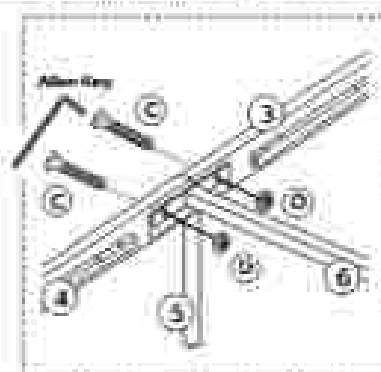

**Step 4:** Insert hardware part (A) to the bed legs.  
**DO NOT** use any power tools as this may damage the frame and will invalidate any claim.

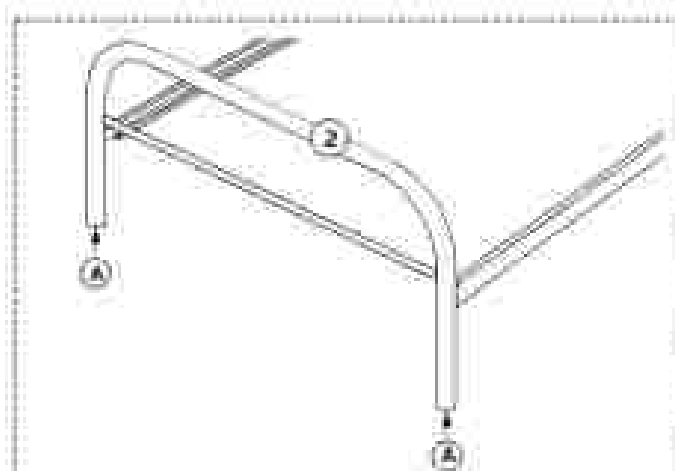

**Step 5:** Place hardware part (E) onto every end of each slit (7) then press firmly into the side supports (3) and (4).  
**DO NOT** use any power tools as this may damage the frame and will invalidate any claim.

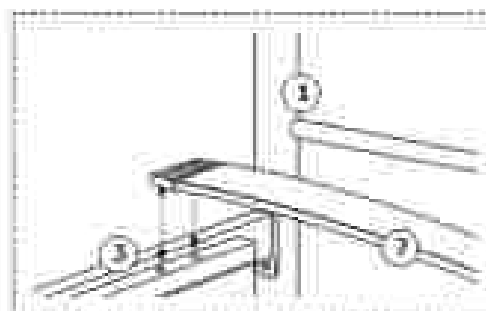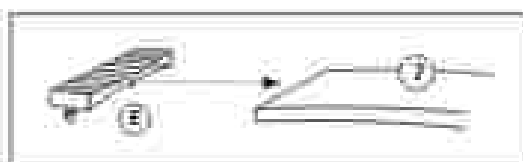

#### Additional information :

- For complete product information, images and dimension diagrams please visit the website [www.birlea.com](http://www.birlea.com).
- If you have any issues with your item please contact the retailer directly you purchased it from who will be able to resolve any issues with Birlea.
- Why don't you send us photos of your assembled furniture to [info@birlea.com](mailto:info@birlea.com) to be shared in our #Birleahome feature on Instagram.