

COZYNSAFE®

a R T H U R



Instruction Manual


Child Safety Car Seat Instruction Manual

Model: EST-528

Group: 0+, 1, 2, 3

Weight: Birth-36kg

(Approx: Birth-11 years)

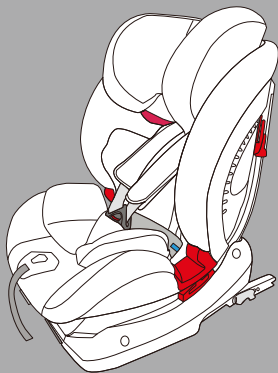



Please read this manual carefully before use

COZY SEAT



*When used as Semi-universal Group 2, 3, these connectors mean: Additional Attachment (FIX)



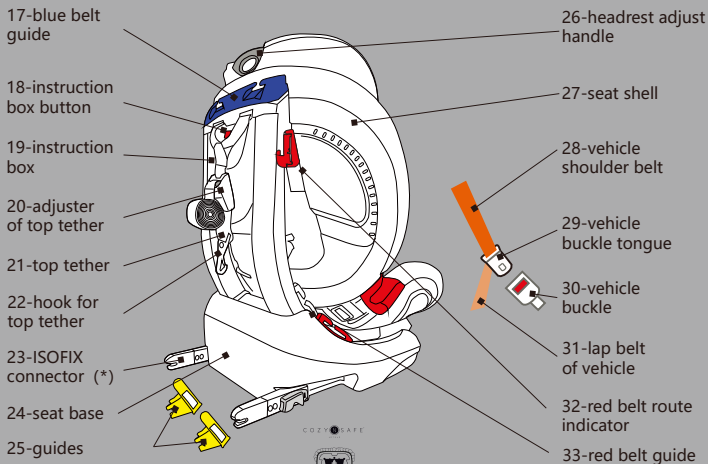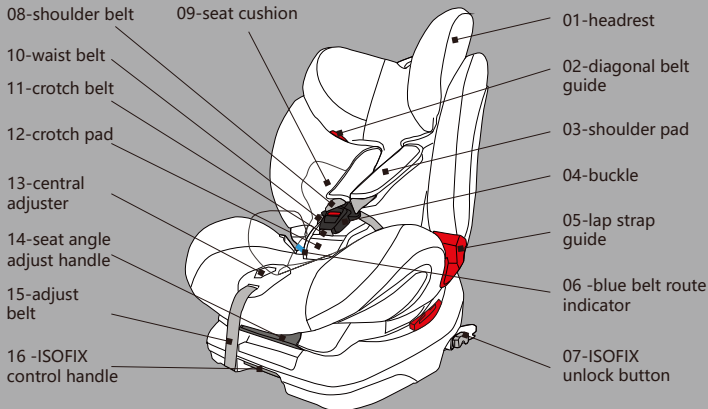













Features Indication Notice this picture is just for reference and may differ from the actual model.



COZY SEAT











Suitable weight and installation methods summary

Group	Weight	Direction of installation	Child fit method	Seat angle	Fit method for seat
0+	0-13kg Birth-15 months Universal	Rearward facing	5 point harness	Position 4 (most reclined)	Vehicle 3 point belt
					
I	9-18kg 9 months - 4 years Universal	Rearward facing	5 point harness	Position 4 (most reclined)	Vehicle 3 point belt
					
I	9-18kg 9 months - 4 years Universal	Forward facing	5 point harness	Position 1,2,3	Vehicle 3 point belt
					
I	9-18kg 9 months - 4 years ISOFIX universal	Forward facing	5 point harness	Position 1,2,3	ISOFIX+ TOP TETHER
					

COZY SEAT



Suitable weight and installation methods summary

Group	Weight	Direction of installation	Child fit method	Seat angle	Fit method for seat
2+3	15-36kg 3-11 years universal	Forward facing	Vehicle 3 point belt	Position 1,2,3	Vehicle 3 point belt (Main method)
					
2+3	15-36kg 3-11 years semi-universal	Forward facing	Vehicle 3 point belt	Position 1,2,3	Vehicle 3 point belt (FIX is an optional method)
					

COZY SEAT



NOTICE(1)

1. When this child car seat is used in group 0+ / 1, 2, 3 for a child (0-18kg/15-36kg) and only fastened by the 3-point safety belt, this is a "Universal" child restraint. It is approved to Regulation No. 44, 04 series of amendments, for general use in vehicles and it will fit most, but not all, car seats.
2. A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a "Universal" child restraint for this age group.
3. This child restraint has been classified as "Universal" under more stringent conditions than those which applied to earlier designs which do not carry this notice.
4. If in doubt, consult either the child restraint manufacturer or the retailer.

NOTICE(2)

1. When used in group I for a child 9kg – 18kg, this is an ISOFIX CHILD RESTRAINT SYSTEM. It is approved to Regulation No. 44, 04 series of amendments for general use in vehicles fitted with ISOFIX anchorage systems.
2. It will fit vehicles with positions approved as ISOFIX positions (as detailed in the vehicle handbook), depending on the category of the child seat and of the fixture.
3. The mass group and the ISOFIX size class for which this device is intended is: Group 1(9kg-18kg), B1.
4. If you have any doubt please contact the manufacturer or retailer.

NOTICE(3)

When this Child Restraint is used in group 2+3 for a child 15kg – 36kg and not only fastened by the 3-point safety belt but also the ISOFIX Attachment, this Child Restraint is classified as "Semi-Universal" and is suitable for fixing into the seat positions of the following cars:

<u>CAR</u>	<u>FRONT</u>	<u>REAR</u>	
		<u>Outer</u>	<u>Centre</u>
(see <FIT LIST>)	Yes (With frontal airbag disabled)	Yes	No

Seat positions in other cars may also be suitable to accept this child restraint. If in doubt, consult either the child restraint manufacturer or the retailer.

COZY SEAT



Table of content

1. Introduction	07
2. Suitability	07
3. General safety instructions	08-09
4. Adjustments	10
4.1 Removing and resetting the seat cushion.....	10
4.2 Adjusting the recline position.....	10
4.3 Crotch belt adjustment	11
4.4 Adjusting the harness and headrest height.....	11
5. Seat selection and adjustment	12
5.1 Adjusting the car seat.....	12
5.2 Seat for universal installation.....	12
5.3 Seat for semi-universal installation.....	13
5.4 Seat for ISOFIX-universal installation.....	13
6. Installation in vehicle	13
6.1 Installation for Group 0+.....	13
6.2 Installation for Group 1 (option 1).....	15
6.3 Installation for Group 1 (option 2).....	16
6.4 Installation for Group 1 (option 3).....	17
6.5 Installation for Group 2,3 (option 1).....	19
6.6 Installation for Group 2,3 (option 2).....	19
7. Securing the child	20
7.1 Securing the child in the age group 0+(0 – 13 kg) , 1 (9 – 18 kg).....	20
7.2 Securing the child in the age groups 2+3 (15 – 36 kg).....	21
8. Removing and replacing the cover	23
9. Washing and maintenance	23
9.1 Fabric.....	23
9.2 Belt and plastic.....	23
9.3 Buckle.....	23
10. Steps to take after an accident	23
11. Warranty	24
12. Fit list	25

COZY SEAT



Instruction Manual


1. Introduction

We are happy that you have decided on this seat as your choice for a child restraint system.

To gain the most comprehensive protection for your child, the seat must be used exactly as described in this manual.

Please read this instruction manual carefully before use. It is most important that these instructions remain with the car seat at all times.

You can store these instructions in the instruction manual compartment (**part no.19**) provided on the rear of the backrest of your seat. Push the button down (**part no.18**) and pull back to open the box (**fig.1**).

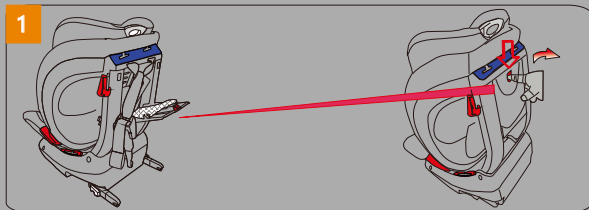

2. Suitability

The seat has been tested and approved according to the newest version of the ECE-R44/04 regulation. It is approved with the "universal", "semi-universal" and "ISOFIX universal" classes during different age stages.

The child seat restraint system is suitable for weight classes 0+, 1, 2 and 3, i.e. for children weighing between 0 and 36kg (approximately birth to 11 years of age).

Age Groups (Weight Classes):

0+:	0kg – 13kg
1:	9kg – 18kg
2+3:	15kg – 36kg

For children weighing 0-18kg (corresponding to ages of approximately birth to 4 years), the 5 point harness system must be used. Please observe the proper use of the harness system (see Section 7.1).

For use in your vehicle, please also follow the car manufacturer's manual, or contact your car dealer.

COZY SEAT




3. General safety instructions

If it is the first time you have used this child restraint system, please read the entire instruction manual thoroughly before installation. In any case improper installation can endanger the life of your child.

Make sure the child restraint system is properly installed with your child, prior to the trip. Do not attempt to make any adjustments during driving.

Only suitable if the approved vehicles are fitted with 3 point vehicle belts, approved to UN/ECE Regulation No. 16 or other equivalent standards.

The rigid items and plastic parts of a child restraint must be so located and installed that they are not liable, during everyday use of the vehicle, to become trapped by a movable seat or in a door of the vehicle.

 Airbags can cause injury. Do not use this child seat on a passenger seat fitted with a frontal airbag.

Any straps holding the restraint to the vehicle should be tight. Any straps restraining the child should be adjusted to the child's body, and the straps should not be twisted.

It is very important to ensure that any lap strap is worn low down, so that the pelvis is firmly engaged.

The child restraint system should be changed when it has been subject to violent stresses in an accident.

Do not make any alterations or additions to the device without the approval of the competent authority. It is dangerous not to follow the installation instructions provided by the child seat restraint manufacturer.

It is recommended that the child seat should be kept away from sunlight, otherwise it may be too hot for the child's skin.



3. General safety instructions

Never leave your child unattended in the child restraint system.

Any luggage or other objects liable to cause injuries in the event of a collision must be properly secured.

The child restraint must not be used without the cover.

The seat cover should not be replaced with any other than the one recommended by the manufacturer, because the cover constitutes an integral part of the restraint performance.

Your car seat must be positioned and installed properly so that, under normal vehicle usage conditions, no part can become jammed under or between any moveable seat or in the vehicle door.

If there is an interference between the adult safety-belt buckle and child restraint system, it is deemed as an unsatisfactory position of the adult safety-belt buckle relative to the main load bearing contact points on the restraint. You should contact the child restraint manufacturer if in doubt about this point.

Do not use any load bearing contact points other than those described in the instructions and marked on the child restraint.

When you use this child restraint system in Group 1, and fit the seat using ISOFIX, you must read the car manufacturer's handbook.

COZY SEAT




4. Adjustments

4.1 Remove the seat cushion

The seat must be used for children from 0 to 13kg (approximately birth to 9 months old) with the seat cushion (Fig. 2).

Once your child's weight is between 9kg to 36kg (approximately 15 months to approximately 12-year-old) you must remove it.

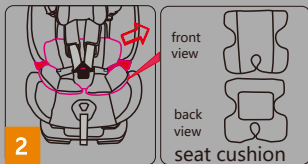

4.2 Adjusting the recline position




The child seat can be adjusted to different angles. Method as below: (Fig. 3,4)

4.2.1. Using a single hand press on the front of the seat and pull back the seat angle adjust handle (part no.14).

4.2.2. Push backwards and forwards in the direction of the arrow to adjust the angle.

4.2.3. Release the handle when the seat is at the correct recline angle.

⚠ IMPORTANT - DO NOT USE FORWARD FACING BEFORE THE CHILD'S WEIGHT EXCEEDS 9KG.

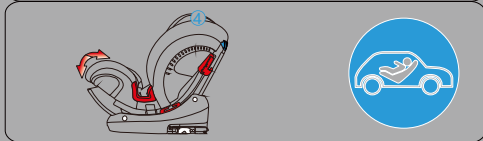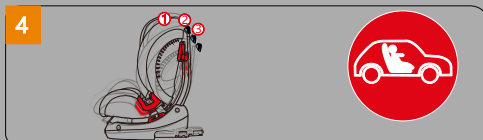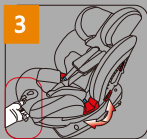

COZY SEAT



4.3 Crotch belt adjustment


The crotch belt is positioned near the inner slot. When you feel that the crotch belt is too tight for your child, please adjust as follows: **(Fig. 5,6)**

4.3.1. Pull up the cover at the front of your seat, pinch the crotch belt **(part no.11)** and push down.

4.3.2. Then twist it through to the inner slot.

4.3.3. Adjust the belt so that it is flat and ensure that the crotch belt is not twisted.

4.3.4. After adjusting pull and push it several times to ensure it is fixed well.

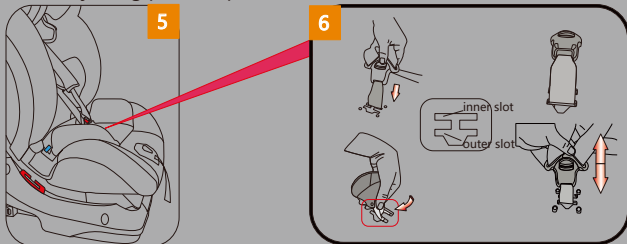

4.4 Adjusting the harness and headrest height

⚠ Notice: The child seat's harness has 9 height positions. The top of the shoulder belt must be parallel or a little higher than the child's shoulders. This will provide the most effective protection for your child in the event of a collision.



Follow the steps below.

4.4.1. Relax the harness before adjusting the height, using one hand press down the center adjuster button, **(part no.13)** at the same time use the other hand to hold the shoulder belt **(part no.08)** and pull back **(Fig. 7)**.

4.4.2. Place one hand into the ring of the headrest adjust handle **(part no.26)** on the top of the headrest and hold on. At the same time press your thumb on the top of the headrest **(part no.01)** **(Fig. 8)**.

4.4.3. Pull up and push down the headrest to adjust the height. **(Fig. 8)**

Then relax your hand when the headrest is at the suitable position, pull and push again to ensure that the headrest is locked in place **(Fig. 8)**.

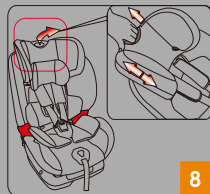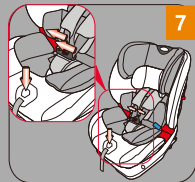

COZY SEAT



5. Seat selection and adjustment

5.1 Adjusting the car seat

If installation is prevented by a vehicle headrest, it must be set at the highest position or removed (**Fig. 9**).

Put the seat on the vehicle seat, ensure that the backrest of seat can rest securely against the backrest of the vehicle seat (**Fig. 10**).



5.2 Seat for universal installation for (Group 0+, 1, 2, 3)

The child restraint seat can be installed in vehicles on any seat suitable for use in the listed vehicles fitted with 3 point retractor safety-belts, approved to ECE Regulation No. 16 or other equivalent standards (**Fig. 11**).

It must not at any time be fitted using only a 2 point lap belt. When used in Group 0+ and Group 2 +3 (**Fig. 12**).

If the car manufacturer allows the child restraint system to be used on the front passenger seat, the seat should be moved to the position furthest back (**Fig. 13**).

We suggest to always install this child seat at the rear seat of the vehicle. This will be a safer position for your child.

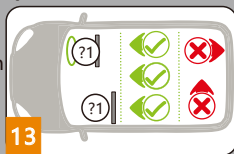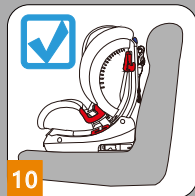

COZY SEAT



5.3 Seat for semi-universal installation for (Group 2 +3)

Semi-universal installation of the child restraint system is only possible on car seats fitted with ISOFIX anchors. With the aid of the ISOFIX connectors, the seat can be securely fastened to the body of the vehicle by using these ISOFIX anchor points.

For the approved vehicles and seat positions suitable for the installation of the seat, please refer to section 12 Fit List. Fit List of applicable models.

5.4 Seat for ISOFIX-universal installation for (Group 1)

ISOFIX-universal installation of the child restraint system is only possible on car seats fitted with ISOFIX anchors and top tether anchor. With the aid of the ISOFIX connectors and top tether anchor, the seat can be securely fastened to the body of the vehicle by using these ISOFIX anchor points and top tether anchor point.

6. Installation in the vehicle

6.1 Installation for Group 0+ : rearward facing installation in vehicle with 3 point belt.

Warning: Airbags can cause injury. Do not use this child seat on a passenger seat fitted with a frontal airbag.



Important:

If the vehicle buckle has interference with child seat, then please try in another seat. If the seat still does not fit then please contact our customer service department if you are in any doubt.

Always use the rear seats of your vehicle even if your highway code and vehicle hand book permits use on the front seat. Check your highway code as this regulation may vary according to the country.

It is better to assemble your seat on the side of the pavement or on a drive way.

COZY SEAT




⚠ IMPORTANT - DO NOT USE FORWARD FACING BEFORE THE CHILD'S WEIGHT EXCEEDS 9KG.

(We recommend to try and extend the use of age and weight to use the rear facing position until your child's weight is more than 13kg).

6.1.1 Seat angle adjustment: Refer to **(fig.14)** to adjust the seat to the most reclined position (the 4th position).


6.1.2 Seat installation: Place the child seat on the rear seat in the vehicle. Ensure that the bottom of the child seat is against the vehicle seat surface, and the front of the child seat touches the vehicle seat backrest. **(fig.15)**.

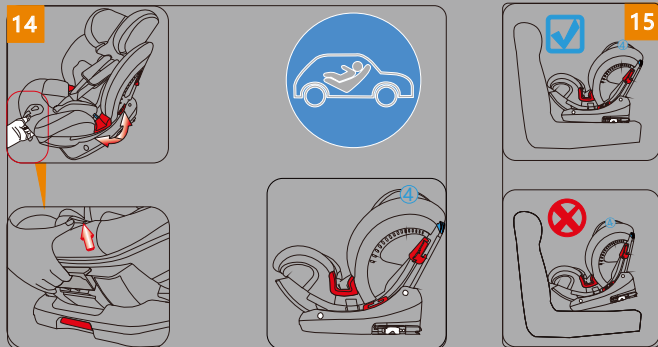

6.1.2.1. Press the buckle and release the 5 point harness belt (fig.16).

Place the two shoulder pads and belts on both sides of the seat **(fig.17)**.

Move the tongue of seat cover to the front of the child seat **(fig.18)**.

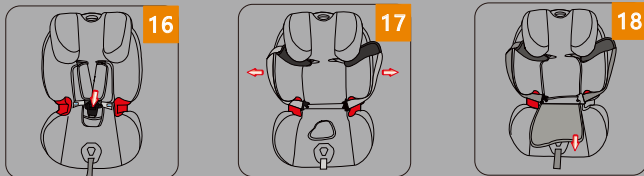



COZY SEAT



6.1.2.2. Extend the vehicle 3 point belt to the maximum (fig.19).

Move the lap strap through the slot at front of child seat, then through to the other side (fig.20).


Insert the buckle tongue into the vehicle buckle and you will hear a "click" (fig.21).

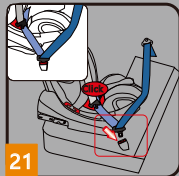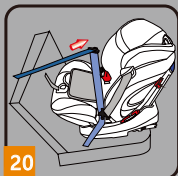

6.1.2.3. Turn the shoulder part of the 3 point vehicle belt around the back of child seat (fig.22).

Insert the diagonal belt into the blue belt guide (part no.17) at the back of the child seat (fig.23).

Pull the diagonal belt at the top of the vehicle buckle, make sure the belt is tight (fig.23). Then pull the diagonal belt at the top of the seat as indicated by the arrow, as tight as you can (fig.24).

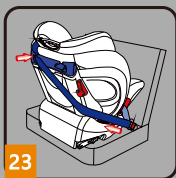

6.1.3 Installation of child: Refer the (section 7.1) to fit your child carefully into the car seat to complete the installation.

Finally check the child seat is fixed securely on the vehicle seat. If you find any shaking movement you must tighten the belt again until the child seat is secure enough.

⚠ Important: Misuse of the child safety seat will reduce the protection that the seat provides.

⚠ Check that the belt in at the right position and is tight enough at all points and ensure that no twists have appeared in the belt.

COZY SEAT



6.2 Installation for Group 1 (option 1): Rearward installation in vehicle with 3 point belt.


In this option, the seat installation is exactly the same as 6.1, it is suitable for children up to 4 years approximately.

6.3 Installation for Group 1 (option 2): Forward installation in vehicle with 3 point belt.

⚠ IMPORTANT - DO NOT USE FORWARD FACING BEFORE THE CHILD'S WEIGHT EXCEEDS 9KG.



6.3.1 Seat angle adjust: Refer to (fig.25) to adjust the seat to one of the recline positions (position 1,2,3).

6.3.2 Seat installation: Place the child seat in the forward facing position in the vehicle. Ensure the bottom of the child seat is against vehicle seat surface, and the back of the child seat touches the vehicle seat backrest. The child seat base should not be suspended (fig.26).

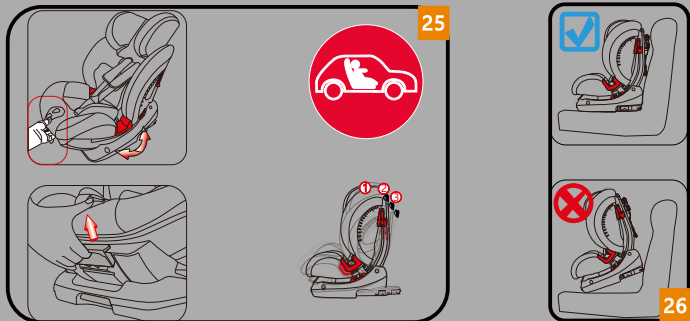

6.3.2.1. Extend the vehicle 3 point belt to the maximum (fig. 27).



Insert it through the the slot at the side of the seat, (fig. 28) then through to the other side (fig. 29).

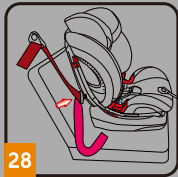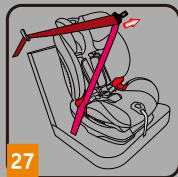



COZY SEAT



6.3.2.2. Insert the buckle tongue into the vehicle buckle and you should hear an audible "Click" (fig. 30). Then put the lap strap of the 3 point vehicle belt into the slot that is between the seat body and seat base (fig31). The lap strap must be in place (fig.32).

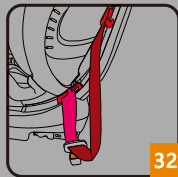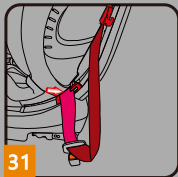

6.3.2.3. Repeat the same steps on the other side (fig.33). Pull the diagonal belt at the side of the vehicle buckle, to ensure that the belt is tight, (fig34). Then pull the diagonal belt at the top of the seat as indicated by the arrow, as tight as you can (fig.35).

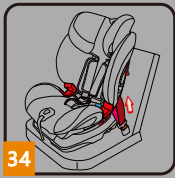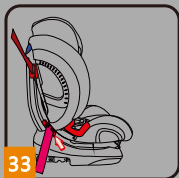


6. 4 Installation for Group 1 (option 3): Forward facing installation in vehicle with ISOFIX and top tether


⚠ IMPORTANT - DO NOT USE FORWARD FACING BEFORE THE CHILD'S WEIGHT EXCEEDS 9KG.

6.4.1. ISOFIX installation


6.4.1.1 First put both guides (part no.23) onto the ISOFIX anchor fittings between the seat and backrest of the vehicle seat (Fig. 36).




6.4.1.2 Using one hand grab the ISOFIX control handle (**part no.16**) at the lower part of the base, and pull outward (**Fig.37**). The ISOFIX connectors (**part no.23**) will now automatically extend from the back of the seat base (**part no.24**).

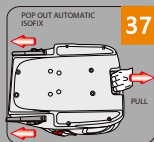


Test whether the connector hooks are opened by pushing the ISOFIX unlock button (**part no.07**) forward (**Fig. 38**). When the ISOFIX unlock button indicates "RED", the connector hooks are open.

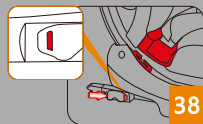

6.4.1.3. Push down the instruction box button (**part no.18**), pick the top tether (**part no.21**) and put it to the front of the child seat (**fig.41**).

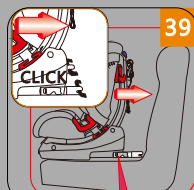


6.4.1.4 Then place the seat on the vehicle seat and push both ISOFIX connectors (**part no.23**) onto the metal brackets (ISOFIX anchor points) and press firmly against it so that the connectors (part no.23) lock in place (**Fig. 39**).

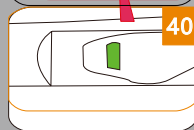

The correct locking will be confirmed when the indicator changes to "GREEN" this shows on the ISOFIX unlock button (**part no.07**) on both sides (**Fig 40**).

Test whether the ISOFIX connectors (**part no.25**) are closed by moving the seat shell (**part no.31**) and checking if the are locked well in place.

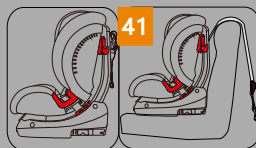

6.4.2 Top tether installation

6.4.2.1. Push down the button on the top tether adjuster (**part no.20**) and at the same time pull the belt at anchor point side near the child seat to lengthen the top tether strap (**fig.42**).




COZY SEAT



6.4.2.2. Put the top tether (part no.21) under the vehicle headrest, then hook it onto the vehicle top tether anchorage according to the vehicle manual (fig.43).

6.4.2.3. Finally hold the end of the belt and pull until the belt is tight enough (the green indicator will appear) (fig.44).

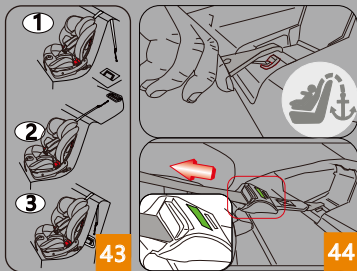

Finally check the child seat is fixed stable on the vehicle seat. If you experience any shaking movement you must tighten the belt again.

6.4.3. Installation of child: Refer the (chapter 7.1) to fit your child carefully to complete the installation.

6.5 Installation for Group 2, 3 (option 1): Forward facing installation in vehicle with 3 point belt.

⚠ IMPORTANT- when your child's weight exceeds 15kg, you may directly install in this way.

6.5.1 REMOVE THE 5 POINT HARNESS : Refer to chapter 7.2.1

6.5.2 SEAT INSTALLATION: Refer to chapter 6.3.1\6.3.2

6.5.3 FIT YOUR CHILD INTO THE SEAT: Refer to chapter 7.2.3

6.6 Installation for Group 2, 3 (option 2): Forward facing installation in vehicle with 3 point belt and ISOFIX.

6.6.1 REMOVE THE 5 POINT HARNESS: Refer to chapter 7.2.1

6.6.2 ISOFIX INSTALLATION: Refer to chapter 6.4.1


6.6.3 FIT YOUR CHILD: Refer to chapter 7.2.3

7. Securing the child


7.1 Securing the child in the age Group 0+(0 – 13 kg), Group I (9 – 18 kg)

When your child's weight is between 0-18kg. Your child will be fitted using the 5 point harness. Following the steps below:


7.1.1. Relax the harness before adjusting the height. Using one hand press down the center adjuster (**part no.13**), at the same time with the other hand hold the shoulder belt (**part no.08**) and pull back (**fig.45**).

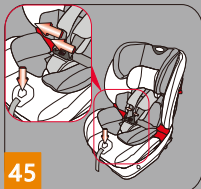

7.1.2. Relax the buckle: push down the red button on the buckle (**part no.04**). The buckle tongue will be released. Then put the harness at both sides of the seat (**fig 46**).

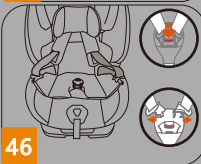

7.1.3. Put your child into the child seat, ensure the buckle (**part no.04**) is in front of your child's crotch. Move your child's arms through the shoulder belt (**part no.08**). The shoulder belt and the shoulder pads should sit just on the top of your child's shoulder (**fig.47**).

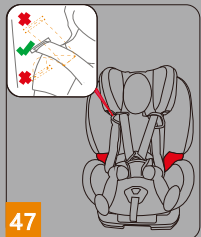


To adjust the harness and headrest height refer to (chapter 4.4). The top of the shoulder belt must be parallel or a little higher than the child's shoulders. Too high or too low is not recommended.

7.1.4. Reassemble the buckle (**part no.04**) until you hear a "click" (**fig.48**).



7.1.5. Pull back the adjuster belt (**part no.15**) to tighten the harness. To be sure there should not be more than a fingers width between the harness and your child. It is most important to ensure that any lap strap is worn low down, so that the pelvis is firmly engaged (**fig.49**).

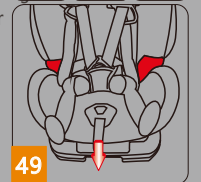

⚠ Notice: If the harness is too tight, please relax it then adjust it again.

COZY SEAT



7.2 Securing the child in the age group 2+3 (15 – 36 kg)


⚠ Important: When your child's weight is more than 15kg, you can use the vehicle 3 point belt to fit your child directly into the seat.

7.2.1 Remove harness

7.2.1.1. Relax the harness (**fig. 50**).

7.2.1.2. Turn to the back of your child seat ,push down the instruction box button (**part no.18**) and at the same time pull out the box (**fig.51**).


7.2.1.3. Pull out the adjuster belt and release the two shoulder belts from the metal connector (**fig.52**).

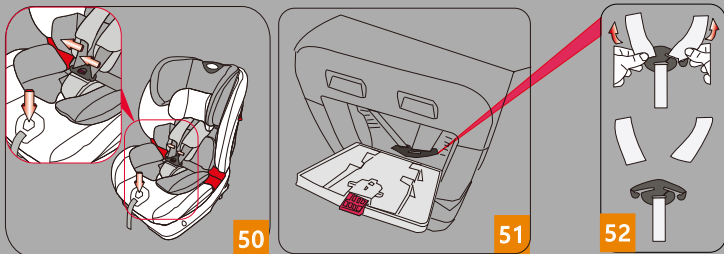

7.2.1.4. Release the shoulder straps from the 6-shape metal piece (**fig 53**).

7.2.1.5. Pull out the shoulder straps (**fig 54**).

7.2.1.6. Twist the crotch belt (**part no.11**) and make the corner align with the front slot then pull out the metal to release the buckle and crotch belt (**fig 55**).

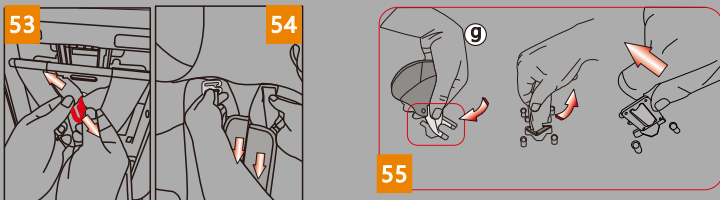

7.2.2 Seat installation

The seat can be used in only a forward facing position at Group 2+3.

The ISOFIX connector is optional for Group 2+3,

7.2.2.1 First refer to **chapter 4.2** to adjust the seat angle to the right position.


7.2.2.2 Then refer to **chapter 5.1** to put the child seat onto the vehicle seat, make sure the backrest is flush against the vehicle seat backrest.

7.2.3 Fit your child

7.2.3.1. Fit your child seat in the vehicle seat. Make sure your child's back is against the backrest (**fig.26**).

7.2.3.2. Adjust the height of the headrest, the space between the top of child's shoulder and the bottom of the headrest should be two finger space apart.


7.2.3.3. Extend the vehicle belt to the maximum length and move the belt around in front of your child. Insert the buckle tongue into the vehicle buckle until you hear an audible "click". (**fig.56, 57**)

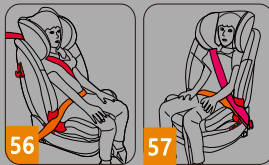

7.2.3.4. Insert the diagonal belt into the diagonal belt guide on the bottom of the headrest (**part.02**).


7.2.3.5. Adjust the vehicle belt's lap section. It is important to ensure that any lap strap is worn low down, so that the pelvis is firmly engaged.

7.2.3.6. Pull the diagonal belt at the top of the vehicle buckle to make the belt tight (**fig.58**).

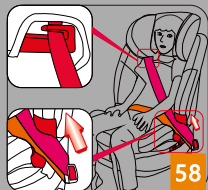

7.2.3.7. Then pull the diagonal belt at the top of the seat as indicated as tight as you can (**fig.59**).

7.2.3.8. Finally check the child seat is fixed stable on the vehicle seat. If you find any shaking movement you must tighten the belt again.

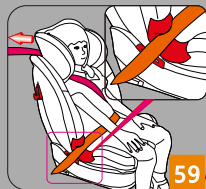

8. Removing and replacing the cover


The fabric cover on this seat can be removed for washing. It just needs to be pulled out at the fringe of the seat (**fig.60**). After washing you can re-cover the seat again.

The seat cover is an integral part of the child seat. The child restraint must not be used without the cover.

The seat cover should not be replaced with any other than the one recommended by the manufacturer, because the cover constitutes an integral part of the restraint performance.

Suggestion: Do not wash the fabric frequently. It must assemble again in the original state after washing.

To replace the cover, follow the steps for removing the cover in reverse order.

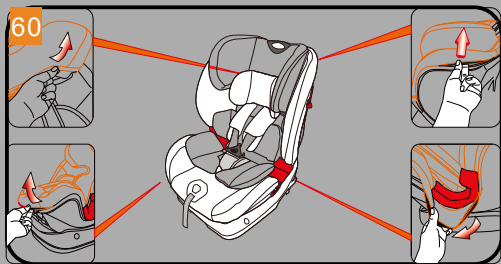

9 Washing and maintenance

Check if there is any part of the car seat that is missing or broken, if this is the case do not use the seat again.

9.1 Fabric:

Fabric can be washed in temperatures less than 30°C. They should then be left to dry naturally.

9.2 Belt and plastic:

Wash belt with warm water and mild soap, do not use any solvents or high-potency soap.

Do not remove, move or change the fabric and original fabric or any part of the harness.

9.3 Buckle:

Always check that there is no food debris or other such matter in the harness buckle. This may affect the correct function of the buckle please clean it with warm water. You can hear a "click" when the buckle function is performing normally.

COZY SEAT



10. Steps to take after an accident

After an accident with an impact speed greater than 10 km/h, the child restraint system must be returned to the retailer without fail.

11. Warranty

For the seat we extend a warranty against defects in materials and workmanship for up to one year. The warranty period begins on the date of purchase.

A receipt is required for all claims.

The warranty covers child restraint systems that have been handled properly and are returned in a clean and orderly condition.

The warranty does not cover:

- Normal wear and tear and damage due to unreasonable use.
- Damages due to improper or inordinate usage.

Fabrics: All of our fabrics meet the highest standards regarding colourfastness against UV radiation. Nevertheless, all fabrics fade when exposed to UV radiation.

This is not due to defective material but to normal wear and tear, which is not covered by the warranty.

Please contact your retailer immediately in the event of a warranty claim.

COZY SEAT



12. Fit list

* Since product year



No top tether



With top tether



With 3 point belt



Quantity of vehicle doors



Quantity of seat



Mobile Vehicle



Estate car



Soft top



Hatchbacks



Multi-Purpose Vehicles



Coupe



Check if the vehicle has a suitable Anchor

② 4 ... Suitable seat

a) Starting from the model in the market.

b) Starting from the model in the assemble line.

1) It cannot be used in the back of this seat if the rear seat is electric, you can only use it here if recommended by the vehicle manufacturer.

2) Some old car models do not have ISOFIX anchor points, if there are no ISOFIX anchor points installed then the ISOFIX function cannot be used.

3) The model of special car (can be obtained from car dealers) only.

4) Double bench seat.

5) Only when apply after installing additional foam pad. The attachment is obtained from the auto retailer.

COZY SEAT



12. Fit list



BMW			
1(E87/E81)	3+5	2005	(2) (4)
1(E82)		2007	(2) (4)
1(E88)		2008	(1) (2) (4)
3(E90)		2005	(2) (4)
3(E92)		2005	(2) (4)
3		08/05	(2) (4)
5(F10)		2010	(2) (4)
5(F11)Touring		2010	(2) (4)
5GT		10/09	(2) (4)
7(E65)(Facelift 2005)		2001 - 2008	(2) (4)
7(F01)		2008	(2) (4)
Mini Club Man		2007	(2) (4)
Mini Country man	4	2010	(2) (4)
Mini Country man	5	2010	(4)
X1		10/09	(2) (4)
X5		2006	(2) (4)
X6		2008	(2) (4)
Z4		2002	ISOFIX (4)
MERCEDES-BENZ *			
A		05/05	(2) (4)
B(Facelift 2008)		06/05	(2) (4)

C		2000	(2) (4)
(Facelift 2004)		2007	(2) (4)
C(W204)		2007	(2) (4)
C(S204)		2007	(2) (4)
C(204)		03/11	(2) (4)
E(W212;S212)		2009	(2) (4)
			(2) (4)
E(C207)		2009	(2) (4)
GLK		2008	(2) (4)
ML(W164)		07/05	(2) (4)
R(W251/V251)		12/05	(2) (4) (5) (7)
VOLVO			
C30 ¹⁾	3	2006	1.35m (2) (4)
S80(Facelift 2009) (Typ AS)		2006	(2) (4)
V60 ¹⁾		2010	1.35m (2) (4)
V70 ¹⁾		2000 2007	(2) (4)
V70/XC70		2007	(2) (4)
XC60		2008	(2) (4)
XC90 ¹⁾	5+7	2002	(2) (4)
VW			
Golf V Variant			
	5	2007	(2) (4)
Golf V Variant (Facelift 2009)		2009	(2) (4)
Passat CC		2008	(2) (4)
Polo V		2009	1.35m (2) (4)
Sharan II		2010	(2) (3) (4) (5) (7)
Tiguan		2007	(2) (4)
Touareg(Facelift 2006)		2002	(1) (2) (4)
Touareg II (C2)		2010	(2) (4)

COZY SEAT



Thank you for purchasing this car seat.

Please take the time to read and understand these instructions fully. Failure to follow these instructions may affect your child's safety.

If you are not completely satisfied with the car seat or you would like to change any accessory or obtain any help about the car seat, and you have any doubt, you can contact our customer services department (details on the back of this guide).

Cozy N Safe

Oxford Street, Bilston Wolverhampton,
West Midlands, WV14 7DP, U.K

Tel: +44 (0) 1902 494905

Fax: +44 (0) 1902 490211

Email: enq@cozynsafe.com

Website: www.cozynsafe.com

COZY  SAFE

a R T H u R